



ALCOSCAN ADBs

Specialized in Advertising Commercial Video


ADB is the first IoT (Internet of Things) breathalyzer in the world

Advertising video change, device information check via internet access anywhere, anytime



Which kinds of advertising can be playing on ADBs?

- Beer, whisky or any alcohol beverages
- Drinking alcohol responsible campaigns
- Automobile insurance, taxi or designated-driver services
- Sports or specific TV channels
- Online dating services
- Smartphone application advertising

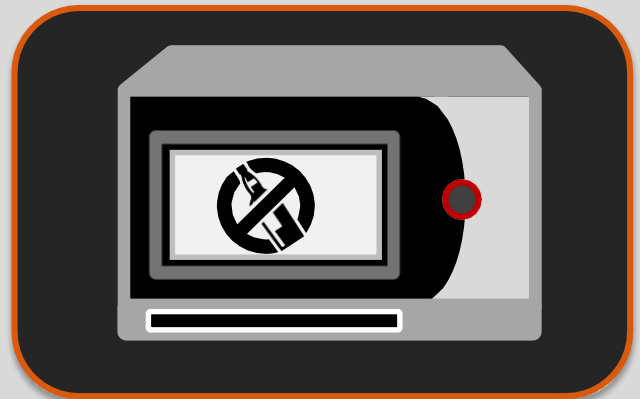

Sentech Korea Corp.

21-6 Jimokro 75 gil, Paju-si, Gyeonggi-Do, 10880, Republic of Korea

Tel. 82-31-8071-4400 / Fax. 82-31-8071-4411 / sentech@sentechkorea.com



1. Press the play button



2. Take out straw



3. Blow 4s using straw



4. Result display

What is the feature of ADBs?

- WIFI connectable 9 inch Tablet PC installed
- Test result & advertising video uploaded at web-server
- Simple button operation type
- Enhanced security: Extra padlock
- Easy supplement of straws by feeding inlet
- Inclined top to prevent putting of glass or bottle on the device



-Extra padlock install-



-Easy straw supplement -

Video guide on Youtube

- Operating ADBs
<https://youtu.be/SH05kDQJE4k>
- Advertising video change by mobile device

<https://youtu.be/1kwiVZVpqws>

ADB's Specification

ADB's Specification	
Indication of BAC	0.000 to 5.000‰
Warm up time	5 seconds ~ 5 minutes
Response time	Within 10 seconds at 1.000‰
Sensor	Fuel cell sensor
Accuracy	+/- 5% @ 1.000‰
Ambient condition	Operation: 0~40°C Storage: 0~50°C
Display	9inch 1024*600pixels of tablet PC
Power supply	AC 110~220, 50/60HZ, 0.54 INPUT DC 5V,3A OUTPUT
Mouthpiece	Cylindrical straw
Weight	4.6kg
Dimension (mm)	375w*250h*93t mm
Open straw feeding inlet	Available
Coin mechanism	Not Available
Extra padlock system	Available
Straw containing	Approx. 100pcs